

# CONFIGURATION AND INSTALLATION MANUAL

# **VERSATILE BRIX SERIES 2.0**



10 NEWTON PLACE
HAUPPAUGE, NY 11788 USA
(877) 685-8439 / (516) 671-7278 / FAX (516) 671-3362
sales@multidyne.com
www.multidyne.com

MULTIDYNE, the Multidyne logo, are registered trademarks of MULTIDYNE Electronics, Inc.

Copyright 2022 MULTIDYNE Electronics, Inc., Hauppauge, New York.

Printed in the United States of America.

All Rights Reserved.

Contents of this publication may not be reproduced in any form without the written permission of MULTIDYNE Electronics, Inc.

This product was designed and manufactured in the UNITED STATES of AMERICA

# **Important Safety Information**

- Do not use this apparatus near water.
- · Clean only with lint free dry cloth.
- · Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purposes of the groundingtype plug. A ground type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit in to your outlet, consult an electrician for replacement of the obsolete outlet.
- Install in accordance with the MultiDyne® installation instructions.
- Install all peripheral equipment (cameras, routers, etc.) accordance with the manufacturer's instructions and safety requirements.
- Protect the power cord from being walked on or pinching particularly at plugs, convenience receptacles, and point where they exit from the apparatus.
- Only use attachments/accessories specified by MultiDyne<sup>®</sup>.
- Use only with the cart, rack, stand, tripod, bracket, or table specified by MultiDyne®, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



**Warning** –indicate danger that requires proper procedures or practices to prevent injury or death to personnel.



**Cautions** indicate proper procedures or practices to prevent damage to equipment or property.



**Warning** –The safe operation of this product requires that a protective earth connection be provided. A grounding conductor in the equipment's mains supply cord provides this protective earth. To reduce the risk of electrical shock to the operator and service personnel, this ground conductor must be connected to an earthed ground. The mains plug shall remain readily operable.



**Warning** –The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



**Warning** - This symbol on the equipment indicates for use at altitudes not exceeding 2000 m.



**Warning** - Contact your local authority for further details on the correct disposal of this waste, in accordance with your national legislation.

- Follow all local Electrical Codes for Grounding, Lightning Arrestment and Surge Protection. Unplug this apparatus during lightning storms or when unused for long periods of time.
- All Electrical Work to the facility must be performed by a qualified Licensed Electrician. All local Electrical Codes must be followed and, if necessary, must be inspected by a Local or State Inspector.
- All servicing of MultiDyne equipment must be perform at the factory by a MultiDyne trained service technician or engineer.
- Throughout this manual, a number of Warnings and Cautions and Notes may be presented to alert the user to important safety or operating information.
- · Always adhere to local building, safety and fire prevention codes during the installation and operation of this product.
- Use only power cords that were shipped with specified for this product and certified for the country of use.
- Connect the unit only to a power source with the specified voltage rating.
- Unless otherwise stated in the Installation Instructions, and in adherence to local Electrical Codes MultiDyne® Equipment should only be plugged into a standard 15 amp dedicated circuit.

# **Laser Safety Information**

This unit is classified as a <u>CLASS 1 LASER PRODUCT</u> according to EN60825-1 (EU) and FDA 21CFR 1040.10 (USA). Class 1 laser products are considered safe and do not result in biological hazard if used according to these instructions.





**Warning** – Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



**Warning** — Never look directly into the end of the optical fiber while either end of the system is operating.



**Warning** — Never clean an optical fiber connector on equipment or cable that is carrying light.



**Warning** – Always use dust caps on fiber optic connectors when cables are not connected. This will protect the connector from damage and accidental exposure of a human eye to an operating laser.

# **TABLE OF CONTENTS**

INTRODUCTION	5
Overview	
HARDWARE DESCRIPTION AND FEATURES	5
Overview	5
Features and Functions	5
VB SERIES CARD DESCRIPTIONS	7
Video Cards	7
Composite Video Cards	9
Audio Card	9
Audio Card Channels	9-10
Audio Card Diving Board	10
Audio Card Connector	11
SYNC Card	12
Transport Options	12
Data Card	13
Channel Support	13
Data Card Connector	14
Ethernet Card	14
Ethernet Card Ports	14
Power over Ethernet (POE) Module	
PANEL INDICATORS	15
Video Card LED Indicators	16
Audio Card LED Indicators	16
Sync Card LED Indicators	16
Data Card LED Indicators	17
Ethernet Card LED Indicators	17
Tools and Equipment Needed	17
Rack Mount Installation	18
Wall Mounting	21-22
Camera Mounting	22-23
POE Installation	
TECHNICAL SPECIFICATIONS	25
Digital Video Interface	25
Ethernet	25
SYNC	25
DATA	25
Analog Audio	25
Digital Audio	25
Electro-Optical	25
Power Rating	25
Mechanical, Environmental	25

#### INTRODUCTION

#### **Overview**

The Versatile Brix (VB) Series Box is a rack mounted stand-alone Video Serial Digital Interface (UHD-SDI) with audio, Ethernet, and data transport sub-system that extend the range limits for interfaces over fiber. There are three versions of the VB Series Boxes which include a two card unit (VB2), six card unit (VB6) and a ten card unit (VB10).

The VB Series are customized to specific customer needs and will combine, convert, receive and transmit all video, audio, and data signals over a single optical fiber link. The system will transport digital signals for video, analog audio, Audio Engineering Society (AES) digital audio, serial data, tally, General Purpose I/O (GPIO), and Ethernet signals.

#### HARDWARE DESCRIPTION AND FEATURES

#### **Overview**

The VB Box power supply is external and operates with a wide range of voltage inputs from 9V to 24V and contains a blower fan mounted to the front of the box that helps move air from the rear to the front. Figure 1 is an exploded view showing a sample of a six slot VB Box configuration locating two Video Cards, an Audio Card, Sync Card, Data Card, and Ethernet Card. This diagram also shows the connection relationship between the card locations and the hardware chassis components.

The VB Box uses Coarse Wavelength Division Multiplexing (CWDM) wavelengths ranging from 1270nm to 1610nm to multiplex different signals all transmitted over a single fiber. Every single optical input/output video channel occupies a single wavelength and audio, data and sync signals travel are on a wavelength.

### **Features and Functions**

The VB Series Box can be configured for customer requirements. The versatility of the VB device comes from a configurable chassis design coupled with a flexible interface to individual circuit cards. Each VB box can be configured to hold two or six signal circuit cards and if required two VB Boxes can be linked together for a larger card configuration based on customer needs.

For our interactive online configuration tool, visit https://configurator.multidyne.com/vb2/

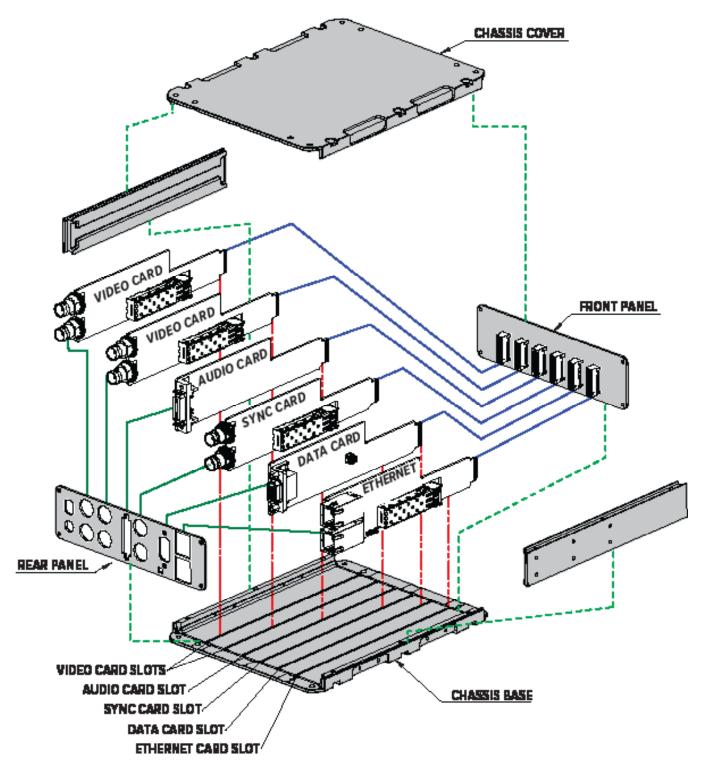


Figure 1. Versatile Brix Series Box Sample Configuration Exploded View.

#### **VB SERIES CARD DESCRIPTIONS**

# **Digital Video Cards**

The VB series Video Card supports all popular standards for digital video transport (e.g.; SMPTE ST 2082, SMPTE ST 2081, SMPTE 424M, SMPTE 292M, and SMPTE 259M) working at 12G-SDI, 6G-SDI, 3G-SDI, HD-SDI, SD-SDI respectively. In addition, the SDI interface will also transport signals compatible with DVB/ASI, and SMPTE 297M interfaces at defined rates. The units include a digital re-clocker and repeater for the SMPTE SDI standards as listed above. For other standards and rates, the signal is automatically bypassed through without re-clocking. For all SDI inputs, the units include automatic cable equalization, see <a href="Input Coax EQ">Input Coax EQ</a> for cable distances and driving based on the data rate detected.

The Video Cards are dual or single channel circuit cards. They can be ordered in two options based on the data rate required:

- 1. 3G Option,
- 2. 12G Option.

The Video Card is the standard model type that can be configured, based on customer requirements, into one of the following options:

- Dual Receive (2RX), see <u>Figure 2</u>.
- Dual Transmit (2TX), see Figure 3.
- Single Receive (RX), see <u>Figure 4</u>.
- Single Transmit (TX), see Figure 5.
- Transceiver (TRX), see Figure 6.

Customers can order the VB Boxes with any model type of Video Card that will meet their needs. When in transmit configuration, the board is configured to receive video from the BNC connector. The video signals are equalized and re-clocked before being transmitted over the Fiber Network. In receive configuration, video signals are received over Fiber Network where they are re-clocked and driven over the copper wire connection at the BNC connector by the cable driver. The data rates are indicated over the front panel:

- The 3G Video Card indicates SDI, HD and 3G,
- The 12G Video Card indicates 3G, 6G or 12G option.

The table below shows the supported rates for the 3G and 12G Video Cards.

SFP Installed/ Rates	SD (270M)	HD (1.5G)	3 <b>G</b>	6G	12G	MADI
3G	Yes	Yes	Yes	No	No	Yes (Bypassed)
12G	No	Yes	Yes	Yes	Yes	No

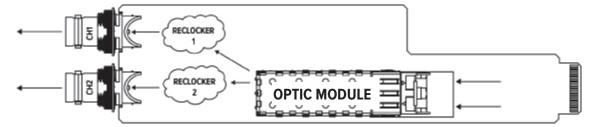


Figure 2. Sample Dual Video Receiver Signal Flow (2 SDI Outputs).

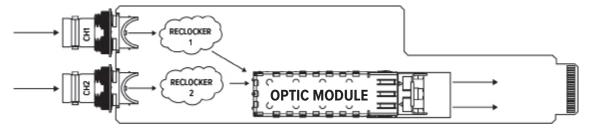


Figure 3. Sample Dual Video Transmitter Signal Flow (2 SDI Inputs).

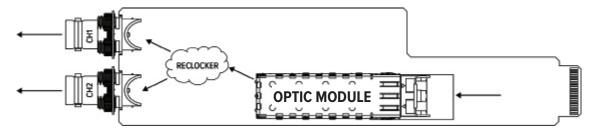


Figure 4. Sample Video Receiver Signal Flow (2 SDI Outputs, Same Signal).

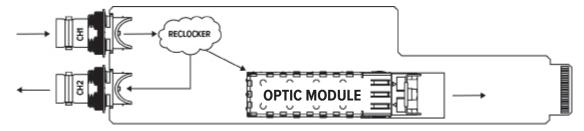


Figure 5. Sample Video Transmitter Signal Flow (1 SDI Input, 1 BNC Loop Out).

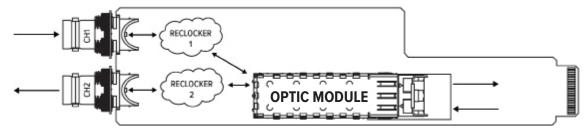


Figure 6. Sample Video Transceiver Signal Flow (1 SDI Input, 1 SDI Output).

# **Composite Video Card**

The Composite Video Card, see Figure 7, is available in three versions:

- 1. Single Transmitter,
- 2. Single Receiver,
- 3. Transceiver.

In the Single Transmitter configuration, the video is received in the bottom BNC from the copper wire connection and transmitted over Fiber Network. The top TX LED for the slot in which the card is installed will illuminate to show the transmission of video sent to the board.

In the Single Receiver configuration, the video is received from the fiber connection and transmitted over copper wire connection at the top BNC. The bottom RX LED for the slot in which the card is installed will illuminate to show that video has been received by the card.

In the Transceiver configuration, the video is received and transmitted as a combination of both the Single Transmitter configuration and Single Receiver configuration.

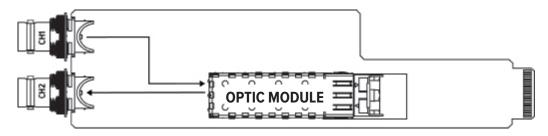


Figure 7. Composite Video Card Sample Flow

### **Audio Card**

#### **Audio Card Channels**

The VB series also transports 4x4 analog audio channels over two digital AES pairs, up to 96 KHz, that cross convert with the four analog channels and a bidirectional stereo channel for intercom applications with maximum level of 4dBu:

- A sample of the Analog Audio Transceiver Card signal flow is shown in Figure 8.
- A sample of the AES Audio Transceiver Card signal flow is shown in see <u>Figure 9</u>.

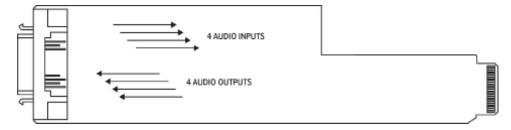


Figure 8. Sample Analog Audio Transceiver Card Signal Flow (4 Analog Audio Inputs, 4 Analog Audio Outputs).

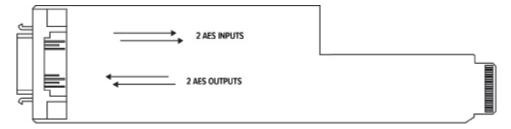


Figure 9. Sample AES Audio Transceiver Card Signal Flow (2 AES Audio Inputs, 2 AES Audio Outputs).

The Audio Card is available in two versions:

- 1. Analog Audio Only, see Figure 8,
- 2. AES Audio Only, see Figure 9,

# **Audio Card Diving Board**

The Audio Card Diving Board is a compact plug-in PCB that connects to the Audio Card and protrudes about two inches from the Audio Card back panel, see <u>Figure 10</u>. The Diving Board contains breakout headers where the customer can have a balanced XLR audio connection from a source to the PCB screw type connectors. These connections can be used for different audio inputs or outputs to the VB Box.

1.	AUD1+IN	9.	AUD4+IN	17.	AUD3+OUT
2.	AUD1-IN	10.	AUD4-IN	18.	AUD3-OUT
3.	GND	11.	GND	19.	GND
4.	AUD2+IN	12.	<b>AUD1+OUT</b>	20.	AUD4+OUT
5.	AUD2-IN	13.	<b>AUD1-OUT</b>	21.	AUD4-OUT
6.	GND	14.	GND	22.	GND
7.	AUD3+IN	15.	AUD2+OUT	23.	NO CONNECTION
8.	AUD3-IN	16.	AUD2-OUT	24.	NO CONNECTION

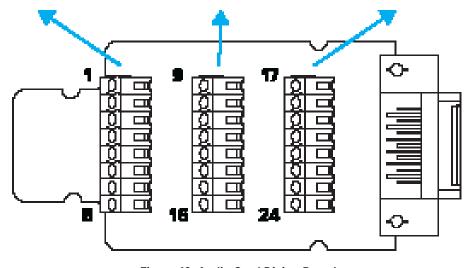


Figure 10. Audio Card Diving Board

# **Audio Card Connector**

The Audio Card connector (PN 1026-3000PE) is a 26 Position cable receptacle connector, see Figure 11.

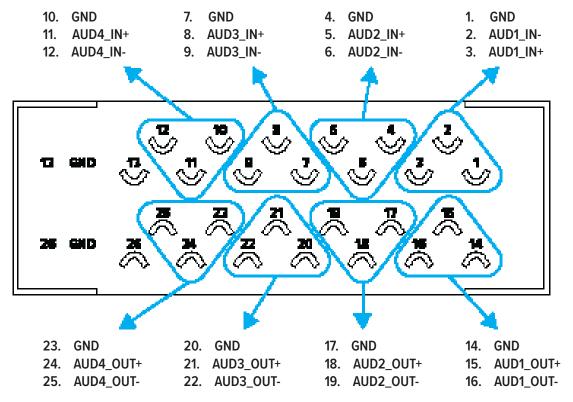


Figure 11. Audio Card Connector.

MDR CONNECTOR PINOUT	FUNCTION	XLR FEMALE	MDR CONNECTOR PINOUT	FUNCTION	XLR FEMALE
1	GND	XLR 1 PIN 1	14	GND	XLR 1 PIN 1
2	AUD1_IN-	XLR 1 PIN 3	15	AUD1_OUT+	XLR 1 PIN 2
3	AUD1_IN+	XLR 1 PIN 2	16	AUD1_OUT-	XLR 1 PIN 3
4	GND	XLR 2 PIN 1	17	GND	XLR 2 PIN 1
5	AUD2_IN+	XLR 2 PIN 2	18	AUD2_OUT+	XLR 2 PIN 2
6	AUD2_IN-	XLR 2 PIN 3	19	AUD2_OUT-	XLR 2 PIN 3
7	GND	XLR 3 PIN 1	20	GND	XLR 3 PIN 1
8	AUD3_IN+	XLR 3 PIN 2	21	AUD3_OUT+	XLR 3 PIN 2
9	AUD3_IN-	XLR 3 PIN 3	22	AUD3_OUT-	XLR 3 PIN 3
10	GND	XLR 4 PIN 1	23	GND	XLR 4 PIN 1
11	AUD4_IN+	XLR 4 PIN 2	24	AUD4_OUT+	XLR 4 PIN 2
12	AUD4_IN-	XLR 4 PIN 3	25	AUD4_OUT-	XLR 4 PIN 3
13	GND		26	GND	

# **Sync Card**

# **Transport Options**

Each VB Box Sync Card is capable of transporting a video reference signal in formats that include SD Black Burst (NTSC, PAL) and HD Tri-Level. Figure 12 shows the Base Side signal flow and Figure 13 shows the Camera Side signal flow. Only the sync portion of the signal is transported across a fiber link, all video and color information is stripped from the signal. HD SYNC supported formats are 720p60, 720p59.94, 720p50, 720p30, 720p29.97, 720p25, 720p24, 720p23.98, 1080p60, 1080p59.94, 1080p50, 1080p30, 1080p29.97, 1080p25, 1080p25, 1080p24, 1080p23.98, 1080i30, 1080i29.97, 1080i25, 1080i24 and 1080i23.98.

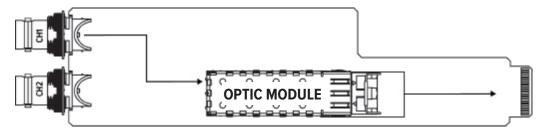


Figure 12. Sample Base Side Sync Card Signal Flow.

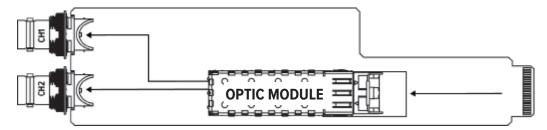


Figure 13. Sample Camera Side Sync Card Signal Flow.

#### **Data Card**

### **Channel Support**

The VB series Data Card supports one Bidirectional Tally, one GPIO Bidirectional Channel, and two Data Channels transport up to 3Mbps. Data can be set in different configurations based on the customer specification. The cards can be configured with RS232, RS422 or RS485 by changing the switch settings, see <u>Figure 14</u>. The LEDs in the front will turn on showing the data paths are active. The RS232 and RS422 operate in the full duplex mode while the RS485 operates in half duplex.

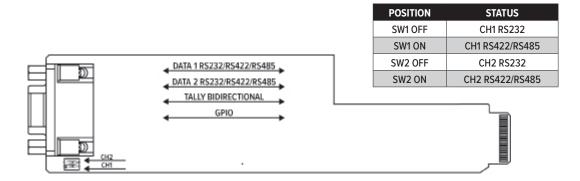


Figure 14. Sample Data Card Signal Flow (2 Bidirectional RS-232/RS-422/RS48, 1 Bidirectional Tally, 1 Bidirectional GPIO).

On a RS485 applications the TX and RX pins must be connected together with a small 680 Ohm Resistor, see <u>Figure 15</u> for a simplified diagram for the resistors connection.

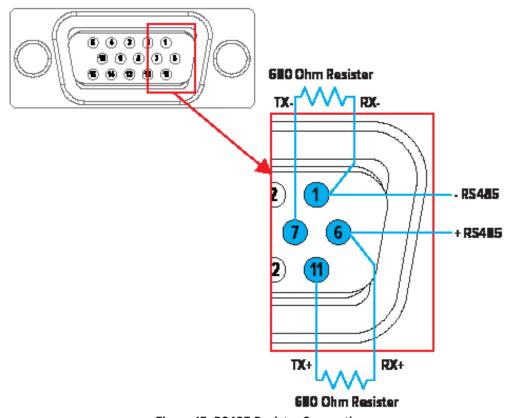


Figure 15. RS485 Resistor Connection.

### **Data Card Connector**

The Data Card connector is a 15 Position D-Sub, high-density receptacle, female sockets connector, see <u>Figure 16</u>. The pin definitions for the connector are as shown below:

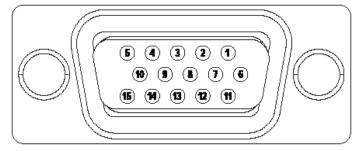


Figure 16. Data Card Cable Connector (Rear View).

PIN NUMBER	FUNCTION
1	CH1 RX-
6	CH1 RX+
7	CH1 TX-
11	CH1 TX+
2	CH2 RX+
8	CH2 RX-
12	CH2 TX+
3	CH2 TX-
9	TALLY IN
10	GPI
13	GPO
4	TALLY OUT
14/15	GND
5	+12V

#### **Ethernet Card**

### **Ethernet Card Ports**

The VB series can also be ordered with one or more Ethernet Cards that can contain one or two Ethernet ports. The card can be used to extend to Gigabit of Ethernet connectivity over the Fiber Network, see <u>Figure 17</u>. Rates of 10/100/1000 Mbps are supported by this Ethernet Card. The Gigabit Ethernet includes a connection for copper input to fiber Ethernet media converter. When a link is established between two units, the green LED on the front panel will turn on. Then as each port is connected the lights will flicker.

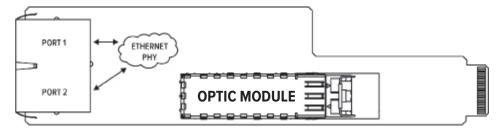


Figure 17. Ethernet Card Sample Flow.

#### Power over Ethernet (POE) Module

Power over Ethernet (POE) Module is operated with the "Juice48" Power Supply to provide the power necessary for cameras that provide power over ethernet. The VB Box, on the Camera side, and "Juice 48" are connected by a Hybrid Cable. A fiber cable is connected between the "Juice 48" and the Base Side to transmit and receive signals. The system is capable of working over 1000 feet of hybrid cable between the camera and "Juice 48" and 500 feet of CAT5 cable between the VB camera side and Camera. Internally the POE Module is located in the VB6 box and configured with an Ethernet Card.

#### PANEL INDICATORS

The VB Series are configured to accommodate customer requirements for specific and varying applications. There are three basic versions of the VB Series Boxes that can be ordered:

- · VB4 configuration is a four card unit,
- VB6 configuration is a six card unit, or
- VB10 configuration is a ten card unit.

This section will provide illustrations of typical circuit card panel indicators for each of the PCBs that can be installed in a VB Box. Sample illustrations of the panels are shown in <u>Figure 18 and Figure 19</u>.

 


Figure 18. VB6 Front Panel Example for PN VX-3761.



Figure 19. VB6 Rear Panel Example for PN VX-3761.

#### Video Card LED Indicators

The front panel of each VB Box contains an LED panel showing status indicators of the SDI cards installed within the box. The front panel shows the direction of the video channel, the channel number and data rate associated with the video signal, see <u>Figure 18</u>. The Video Card LED bit-rates are shown below:

LED	BITRATES	CONDITION
SDI IN SD	270 Mbit/s, 360 Mbit/s, 143 Mbit/s, and 177 Mbit/s	Video Coming in from BNC
SDI IN HD	1.485 Gbit/s, and 1.485/1.001 Gbit/s	Video Coming in from BNC
SDI IN 3G	2.970 Gbit/s, and 2.970/1.001 Gbit/s	Video Coming in from BNC
SDI OUT SD	270 Mbit/s, 360 Mbit/s, 143 Mbit/s, and 177 Mbit/s	Video Output to BNC
SDI OUT HD	1.485 Gbit/s, and 1.485/1.001 Gbit/s	Video Output to BNC
SDI OUT 12G	12 Gbit/s	Video Output to BNC

### **Audio Card LED Indicators**

The Audio Card front panel contains four LED indicators to show the presence of audio. For a typical illustration of the Audio Card indicator, see Figure 18. A breakdown of the channel indicators follows:

- Channels 1 and 2 Inputs have one LED,
- Channels 3 and 4 Inputs have one LED,
- Channels 1 and 2 Outputs have one LED,
- Channels 3 and 4 Outputs have one LED.

The Audio Card LED status and condition definitions are shown below:

LED	STATUS	CONDITION
INPUTS	Green LED Flickering Green LED Flickering Periodically	Analog Signal Input is Present AES Audio Signal Input is Present
OUTPUTS	Green LED Flickering Green LED Flickering Periodically	Analog Signal Output is Available AES Audio Signal Output is Available

# **Sync Card LED Indicators**

The Sync Card has two LEDs. When the first one is lit, it indicates that the link has been established between two Sync Cards. Once the link light is on, the Audio Card and Data Card have also attained link. The second LED is the SYNC OUT or SYNC IN. Usually the camera side has the SYNC OUT indicator and the base side has the SYNC IN indicator. The presence of SYNC in either box illuminates the LED.

LED	STATUS	CONDITION
LINK	Green LED is Solid	Link is Stable
SYNC IN (Base Side)	Green LED is Solid	Reference is inputted at the BNC connector.
SYNC OUT (Camera Side)	Green LED is Solid	Reference is being output to the BNC connector.

#### **Data Card LED Indicators**

The data light remains on when the channels are active. For a typical illustration of the Data Card indicator, see <u>Figure 18</u>. The Data Card LED status and condition definitions are shown below:

LED	STATUS	CONDITION
DATA 1	Green LED is Solid	Card is Ready to Transmit and Receive RS Data
DATA 2	Green LED is Solid	Card is Ready to Transmit and Receive RS Data

#### **Ethernet Card LED Panels**

The Ethernet LED is represented with the standard LAN symbol. It glows green when the Link has been established and it starts flickering as the data is being transmitted. For a typical illustration of the Ethernet Card indicator, see <u>Figure 18</u>. The rear panel has two ports with a built in Ethernet switch.

LED	STATUS	CONDITION
75 75 0	Green LED is Solid	Link is Established
	Green LED Flickering	Data is being Transmitted/Received

#### **INSTALLATION**

#### **Overview**

The Installation procedure for three VB Box Versions is slightly different depending on the application. The procedures in this section are related to installing a VB-6 configuration for a three VB Box, two VB Box and a single VB Box system. The procedures for installing VB-2 and VB-10 boxes are basically the same. However, the following considerations are important:

- The VB-2 is not generally rack mounted except for a custom installation when coupled with a VB-6.
- Only two VB-10 units can be rack mounted in a side by side arrangement, therefore the procedure to follow is the Two VB Box Rack Mount Installation and leave out the Rack Extension Plate.

### **Tools and Equipment Needed**

The VB Series Box requires standard hand tools to complete the installation and there is no special equipment needed. There are three types of installation configurations for the VB box, they include a Rack Mount, Wall Mount or a Camera Mount.

Carefully remove the VB Box and components from the packaging and place onto stable flat surface. Packaging material should be recycled as appropriate to local area requirements.

#### NOTE:

The procedures in this section cover the various VB Series Boxes as well as the Power on Ethernet (POE), which is housed within the same modular container as a VB6 Box. Procedures in this section are therefore typical for all VB Boxes.

# **VB Box Rack Mount Installation**


Verify package contents against the MultiDyne shipping order to make sure everything is present. If anything is missing, please contact MultiDyne immediately.

PART NUMBER	DESCRIPTION
RM-1RU-VB4	VB4 MOUNTING KIT for 1, 2, 3, or 4 VB4 units
RM-1RU-VB6	VB6 MOUNTING KIT for 1, 2, or 3 VB6 units
RM-1RU-VB10	VB10 MOUNTING KIT for 1 or 2 VB10 units


### **Kit Previews**

All combinations of the VB4, VB6, and VB10 mounting arrangements.

# VB4

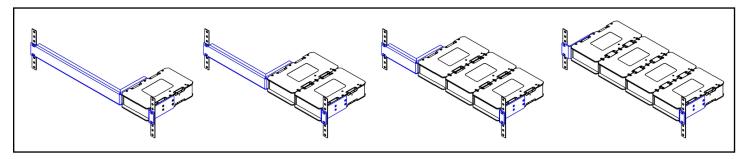

# VB6

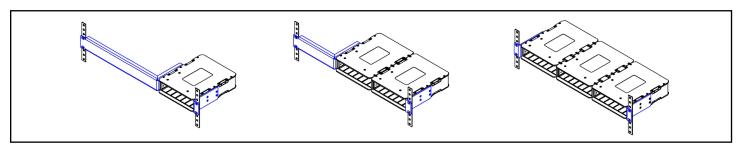

# **VB10**

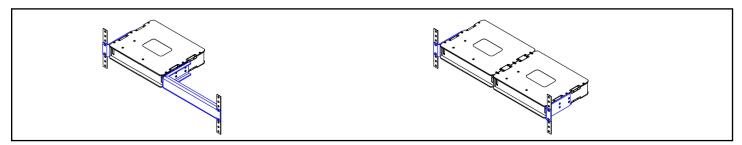


Figure 20. VB4/6/10 Box Horizontal Rack Mounting.

# **Assembling the Rackmount Kits**

Procedure is identical for all kits.

# **Single Unit**

- 1. Attach LONG rack ear with included (6) PANHEAD screws to left side (while facing front panel) of the unit.
- 2. Attach SHORT rack ear with included (6) FLATHEAD screws to the right side.

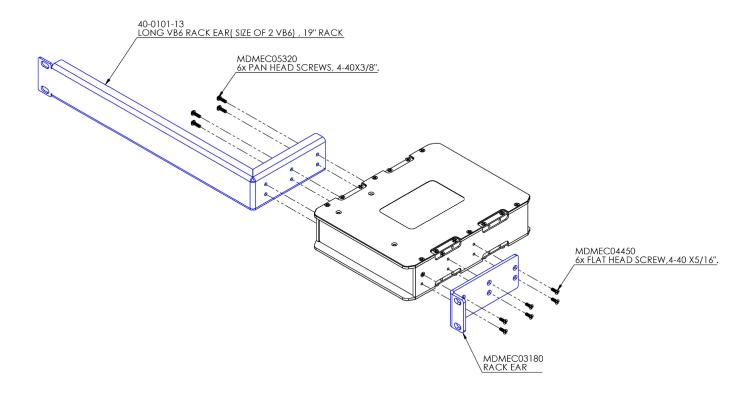


Figure 21. Single VBx Box Horizontal Rack Mounting.

# **Multiple Units**

- 1. Install coupling tabs with (4) 5/16" 4-40 screws each. Two (2) tabs are required on both the top and bottom sides.
- 2. Repeat Step 1 as needed to join all units.
- 3. Add rack ears as shown in Figure 21.

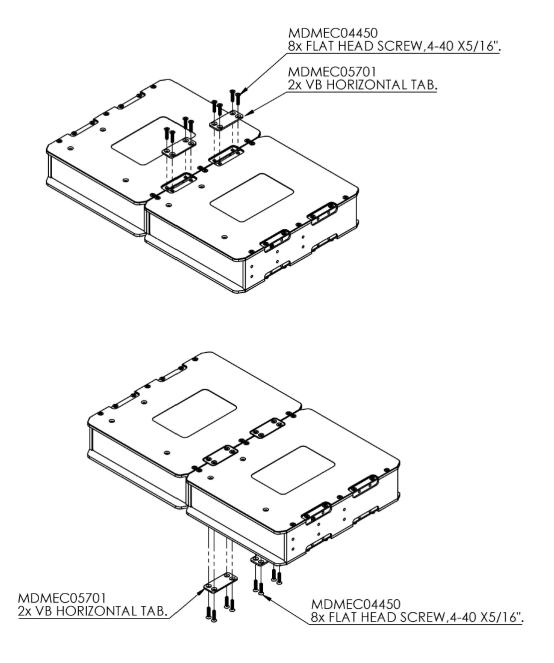


Figure 22. Single VB Box Horizontal Rack Mounting.

# **Wall Mounting**

Wall mounting the VB Series Box requires two wall mounting brackets as well as attaching hardware to secure these brackets to the wall.

#### NOTE:

Because of the variety of building structures that are available (drywall, concrete, plaster and etc.), MultiDyne does not provide attaching hardware to secure the mounting plates to the building structure. It is recommended that a qualified technician perform the installation to make sure local building and electrical codes are in followed.

Verify package contents against the MultiDyne shipping order to make sure everything is present. If anything is missing, please contact MultiDyne immediately. For VB Box Wall mounting the wall brackets are not attached to the unit. A typical VB Box Wall Mounting Configuration shipment includes:

PART NUMBER	DESCRIPTION
WMK-VBSERIES	Wall Mount Kit, VB Series 2, Universal for VB4, VB6, VB10

### **Planning the Wall Mounting Installation:**

The VB Box measures approximately 5.75 inches in width. The wall mounting bracket, shown below, adds another 0.56-inch to the width on both sides, see Figure 23.

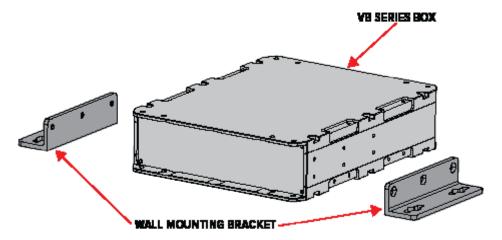


Figure 23. Wall Mounting Bracket Diagram.

### **VB Box Wall Mounting Procedure:**

#### NOTE

It is suggested that the Technician assemble The VB Box with the brackets and use the unit itself as a template to mark the mounting location on the wall.

- 1. Working with the VB Box on a flat surface, install a Wall Mounting Bracket on one side of the VB Box and secure with the included attaching hardware.
- 2. On the other side of the VB Box install a Wall Mounting Bracket with the included attaching hardware.
- 3. At the location where the VB Box is to be installed make sure all wiring and loose equipment has been cleared away to avoid any obstructions.
- 4. Position the VB Box on the wall and mark the wall through the open mounting points on both brackets. Use standard shop practices for securing an anchor to the wall.
- 5. Secure the VB Box to the wall with attaching hardware provided with the separately purchased anchors.
- 6. If more than one VB Box is to be installed repeat steps 1 to 5 for the other location(s).
- 7. Connect all cables to the cards.
- 8. Connect the power cables to the VB Boxes.

### **Camera Mounting:**

The Camera Mounting for the VB Box is commonly used with a Pan-Tilt-Zoom (PTZ) Camera. The VB Box is mounted to the building structure and the PTZ Camera is mounted to a special mounting plate on the VB Box.

#### NOTE:

Because of the variety of building structures that are available (drywall, concrete, plaster and etc.), MultiDyne does not provide attaching hardware to secure the mounting plates to the building structure. It is recommended that a qualified technician perform the installation to make sure local building and electrical codes are in followed.

### **VB Box Camera Mounting Procedure:**

#### NOTE:

It is important to read the Installation Instructions provided with the PTZ Camera to be certain that the installation and connection of the VB Box goes smoothly.

- 1. At the location where the VB Box is to be installed, make sure all the necessary wiring is available to connect the VB Box to the structure. Figure 24 shows an example diagram of a PTZ Camera Mounting.
- 2. Position the Camera Adapter Top mounting plate to the building structure and mark the through the open mounting points. Using standard shop practices secure and anchor the plate to the wall.
- 3. Position the VB Box and Camera Adapter Bottom plate to the Camera Adapter Top mounting plate, install four Vertical Mounting Plates and secure with attaching hardware.

#### **NOTE:**

The Camera Adapter Bottom mounting plate contains all known mounting locations for the PTZ Cameras that are currently on the market. Before mounting the PTZ Camera to the mounting plate check the Camera installation instructions for any additional manufacturer requirements.

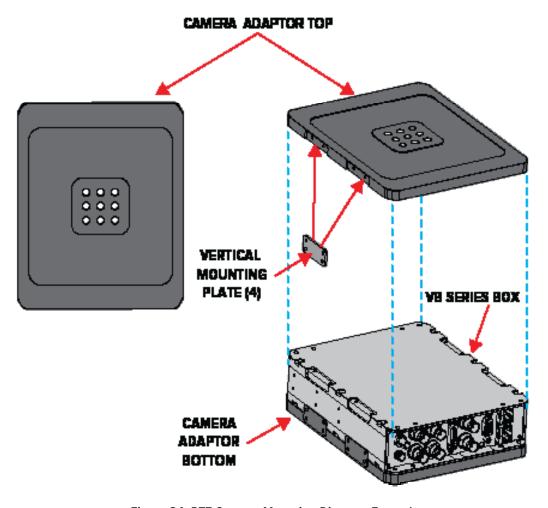


Figure 24. PTZ Camera Mounting Diagram Example

- 4. Using the Camera Installation instructions connect the PTZ Camera to the VB Box and mounting plate assembly, see Figure 25.
- 5. If more than one VB Box is to be installed repeat steps 1 to 4 for the other location(s).
- 6. Connect all remaining cables to the cards.
- 7. Connect the power cables to the VB Boxes

PART NUMBER	DESCRIPTION
PTZK-VB4	PAN-TILT-ZOOM Kit, VB Series 2, for VB4
PTZK-VB6	PAN-TILT-ZOOM Kit, VB Series 2, for VB6
PTZK-VB10	PAN-TILT-ZOOM Kit, VB Series 2, for VB10



Figure 25. Typical PTZ Camera Installation.

#### **POE** Installation

POE installation includes two POE Boxes, one "Juice 60" module, one fiber cable, and one SMPTE 311M Hybrid cable. For the Base Side, the installation location of the POE Box depends on the customer site. Standard mounting configurations can be used and are provided in the INSTALLATION section of this manual. For the Camera Side the POE Box will be mounted to the PTZ Camera, see the Camera Mounting procedure in this manual.

It is important to note that the overall length of installation is a maximum of 24km. Careful routing of this cable must be observed to insure optimum performance of the installation, see Figure 26.

Once installed the POE can be connected as follow:

- Connect the Fiber Cable at the ST Connector on the POE box to the "Juice 48".
- The SMPTE 311M Hybrid cable can be as long as 300 meters (1000 feet) Plug the SMPTE 311M Hybrid cable into the "Juice 48" and the other end into the SMPTE connector on the POE.
- Plug in and connect the "Juice 48" and POE power supplies.

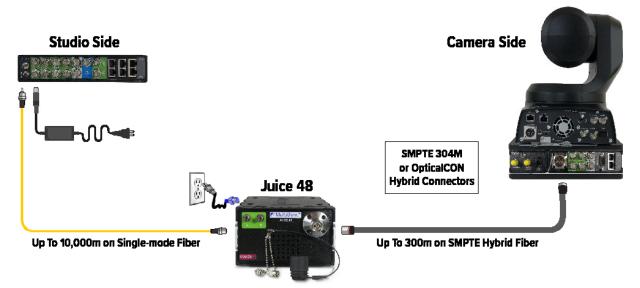


Figure 26. POE Connection Diagram.

# **TECHNICAL SPECIFICATIONS**

### **Digital Video Interface**

9	
75m at 11.88Gb/s	
90m at 5.94Gb/s	
180m at 2.97 Gb/s	
240m at 1.485 Gb/s	
400m at 270 Mb/s	
800mV (peak to peak)	
75 Ohms	
10-12	
< 270ps	
> 15 dB at 5 MHz – 1.485 GHz > 10 dB up to 3 GHz >4 dB up to 12 GHz	

### **Ethernet**

Gigabit I	Ethernet	10/100/1000 Mb/s
-----------	----------	------------------

### Sync

Sync Analog	NTSC-PAL, HDTV Tri-Level

### Data

232, 422, 485	DC – 3Mbps
232 In V	+/- 25V max, 2V min
232 Out	V +/- 5V @ 3Kohm, 1.6V Sens
422, 485 In	V -7V to 12V, 0.2V diff min
GPI/GPO	Normally Open, Form 1 SPST

# **Analog Audio**

S/N	> 90db
Frequency Response (20Hz–20kHz)	<+/-0.1db
Distortion	< 0.05%
Max I/O Level	+24 dBu
Impedance In (bal)	> 10k Ohms
Impedance Out (bal)	< 50 Ohms

# **Digital Audio**

Input/Output	Balanced, AES3/AES3id
I/O Impedance	110 Ohm
	+/-20%, 0.1MHz–6.0MHz
Min/Max Input	2-7 Vpp into 110 Ohms
Rise/Fall Time	5-30ns for 10 Ohm
Jitter	< 20ns

# **Electro-Optical**

Operating Wavelengths	DFB 1271-1611nm
TX Laser Output Power	-2 - 0dBm
Receiver Sensitivity	-20 dBm @ 3Gb/s
Fiber Compatibility	Single Mode
Optical Connector	ST, LC, SC /UPC
Distance Limit	20km

# **Power Rating**

Video Card Max Power	2.12W
Ethernet Card	1.97W
SYNC Card	2.5W
Data Card	0.6W
Audio Card	1.3W
Power Input	2.5mm Jack Center pin
Power Rating, Normal	50W Max
Power Requirement	5-24 VDC

# Mechanical, Environmental

•	
VB-2 Overall Dimensions (LxWxH)	7.25" x 2.875" x 1.75"
VB-6 Overall Dimensions (LxWxH)	7.25" x 5.75" x 1.75"
VB-10 Overall Dimensions (LxWxH)	7.25"x 8.62"x 1.75"
Video Connectors	BNC
SYNC and TIMECODE	BNC
Audio Connector	MDR26-F
Data Connector	HD15-F
Ethernet	Dual Port RJ45
Temperature Range	-25° to +55°C
Humidity Range	0 to 95% RH
	Non-Condensing
Weight	1.5 Pounds