


FRONT PANEL




1. **USB 2.0** for media, firmware update and factory restore
2. **Reset** button. Press and release to reset. Press and hold 10 seconds to factory restore.
3. **Status LEDs**. **Tx**: encoding. **Sf**: screen format. **Rx**: unused. **WF**: WiFi. **LTE**: cellular. **DC**: input voltage active, flash indicates system is operational.
4. **12 Volt DC** input.
5. **microUSB** for terminal. Not for users.
6. **Monitor**: audio and video jack.

Web UI	Value
Username	9200
Password	ENC

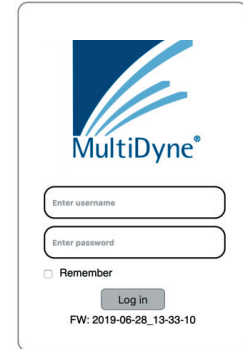

BACK PANEL

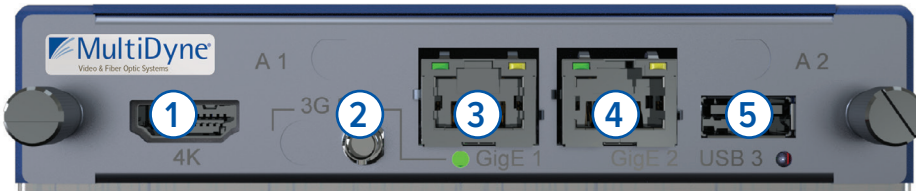

1. **HDMI** output. Unused.
2. **3G SDI** input.
3. **Gigabit Ethernet port 1**. Default avahi named address. [serial number].local/ Default is DHCP.
4. **Gigabit Ethernet port 2**. Default is 192.168.2.7.
5. **USB 3.0** for media, firmware update and factory restore.

Gigabit Ethernet Port	Configuration
GigE 1	DHCP
GigE 2	192.168.2.7

CONNECTING TO THE MD9200-ENC

The MD9200-ENC uses a modern HTML5-embedded Web server for user configuration. Users can connect to the MultiDyne device via Gigabit Ethernet (GigE) port 1 or GigE port 2. GigE port 1 is factory defaulted to DHCP and GigE port 2 is factory defaulted to 192.168.2.7.

LOGIN WITH IP ADDRESS:

 192.168.1.140

UPGRADING FIRMWARE FROM THE WEB UI

1. Log into the MD9200-ENC web GUI and navigate to the HOST Tab.
2. Download the firmware to a disk and folder on your Windows/MAC/Linux computer.
3. Choose File (firmware) from your computer's disk and folder.
4. Click "Upload" button to upload the firmware from your computer to the MD9200-ENC.
5. Count down number in "OK" button indicates how long until update automatically continues. Click "OK" to immediately start update.
6. "Update has begun" prompt. Select "OK" close the window.

Update Firmware

Choose File 9261Eupdate-2017-10-17_15-15-17

Update Firmware

Ready to update to firmware version **9261Eupdate-2017-10-17_15-15-17?**

UPLOADING NEW FIRMWARE FROM A USB DISK

The MD9200-ENC supports USB2 and USB3 media devices. To upload the new firmware from a USB media device (thumb-drive), follow the steps below.

1. Download the firmware to a disk and folder on your computer.
2. Copy the firmware file from your computer's disk and folder to the USB media device.
 - a. There must ONLY be one copy of the firmware on the media device. Remove previous versions before inserting the media device into the MD9200-ENC USB interface.
3. Safely remove the media device from your PC.
4. Insert the media device into the USB interface on the MD9200-ENC.
5. The top green LED will go off once the system mounts the media device and starts the upgrade script. The disk mount and script start takes about 10 seconds. The upgrade will take a little over a minute to complete. The device will reboot automatically.
6. You can remove the USB media device from the MD9200-ENC after the unit reboots and starts decoding.
7. To confirm the update was successful:
8. If more than one unit is upgraded using the same USB media device, there will be a firmware update log for each unit. The naming scheme for the firmware update log is <SN>-firmwareUpdate.log